

Uni Bundle

User Instructions

The mechanism

We use the 5-way adjustable, heavy-duty mechanism for the **Uni Bundle** chairs because it has the added advantage that both the seat and back tilts can be locked independently in any position and has been rated up to 150kgs. It comes with seat slide as standard as well as a ratchet backrest height mechanism and seat tilt tension controller.



1. Seat Slide Lever

On the left hand side of the seat is the lever to slide the seat forwards and backwards and allows the seat to be adjusted by up to 50mm

2. The Seat Height Adjustment Lever

Controls the gas lift for the seat height adjustment. Contrary to popular belief, the first consideration is to ensure your elbows/forearms are at the correct height. Raise or lower your seat so your desk height is at elbow height. If you can't reach the floor after this adjustment, then you need a footrest. The final seat height will depend on the final seat angle you set.

3. Seat Posture Lever

Controls the seat tilt. When you lift this lever, the seat is free to move. Push the lever down to lock. The best position is tilting forward slightly as a tilting forward angle means your hips should be a little higher than your knees; i.e. your thighs should slope downwards as much as you find comfortable.

This promotes better posture. Also, the further back you sit into your chair, the easier you will find it to control the seat tilt angle. If you find the seat tilt too difficult to control, then you will need to slacken the spring by turning knob (5) anti clockwise. If you find it too easy to tilt, you need to tighten the knob (5) by turning clockwise.

4. The Back Posture Lever

Controls the back tilt. Lift the lever to unlock. Push the lever down to lock. This can be locked in any position. It is recommended to set the backrest in an upright position to ensure your spine is as straight as possible.

The backrest height works using an easy lift ratchet mechanism. To raise the backrest simply lift the back with both hands one click at a time. There are 8 clicks (locks) before you reach the top of the ratchet and it will disengage. Drop the back down to the bottom to re-engage.


5. Seat Tilt Tension Control

The tension of the tilt is controlled by turning the handle clockwise (to increase) or anti clockwise (to decrease) the internal spring.

Order of setting posture: 2, 3, 4, 1, 5

The pumps

As standard, our bundle chairs include the lumbar region air pump. you can specify other air pumps in other areas of your back on a premium chair. Not all the pumps and handles shown will be found on your **Uni Bundle** chairs. Your dealer will help you specify the right pumps for your needs and budget.

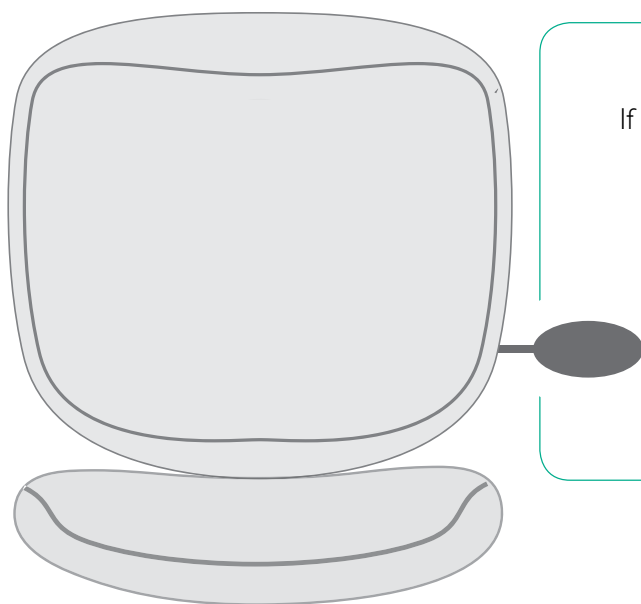

Lumbar Pump

If your chair has a pump here, it is our lumbar pump and will give you adjustable support in the lumbar (kidney) part of your spine. Increase the air in the support by squeezing the bulb; release the air by squeezing the valve



The arms

The standard arm on **Uni Bundle** models is our A arm.

A Arm Functions



Height adjustable arm

FA Arm Functions



Height adjustable arm



Foldaway arm

A3B Arm Functions



Height adjustable arm



Adjustable slide



Adjustable arm pad width

Other arms are available on request.

Albion Chairs Limited,

Albion House, Lane End Road, Sands, High Wycombe HP12 4HG

Tel 01494 464656 Fax 01494 474760

E-mail sales@albionchairs.com www.albionchairs.com